

SPL vs Freq



— 1: Paraflex 640 1w/1m half space (groundplane)




Time vs Freq



— 1: Paraflex 640 Group Delay




Impedance vs Freq

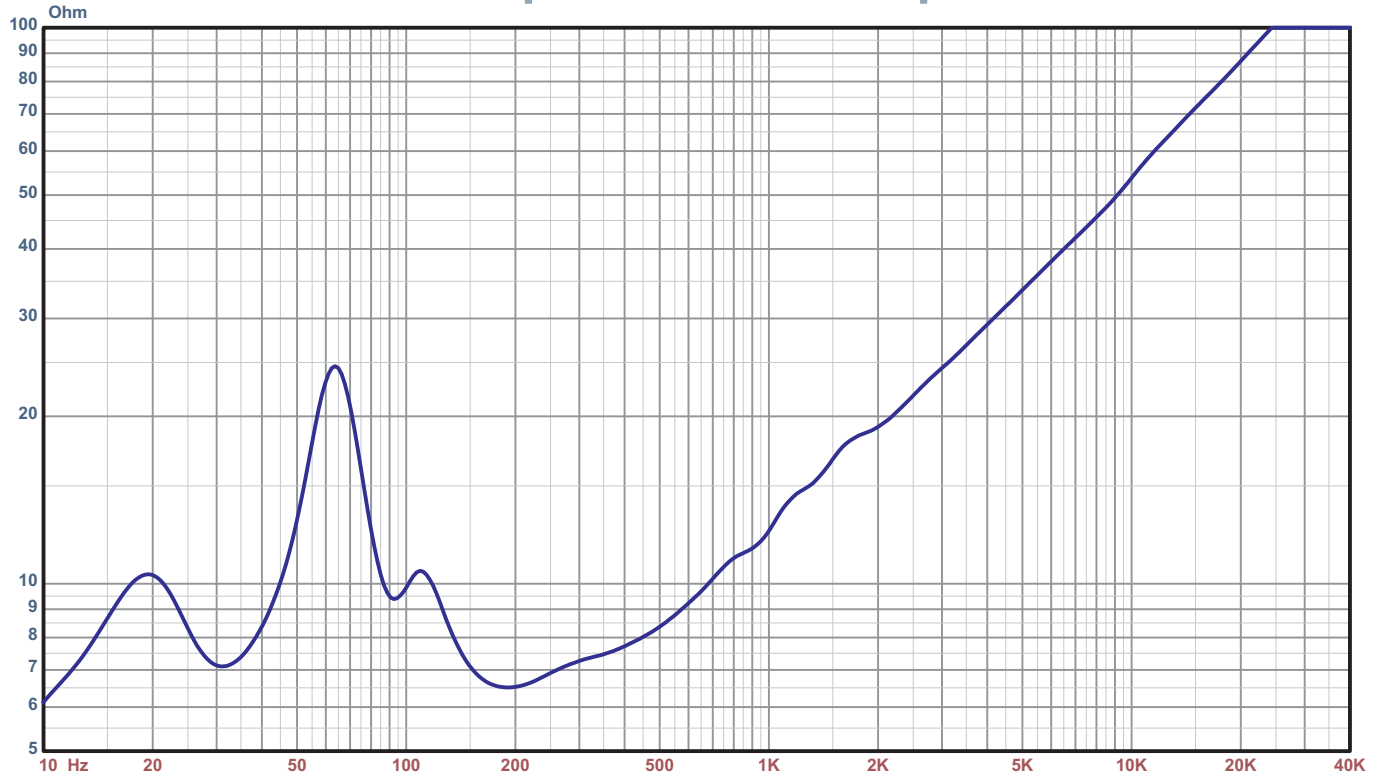

— 1: Paraflex 640 Impedance



SPL vs Freq

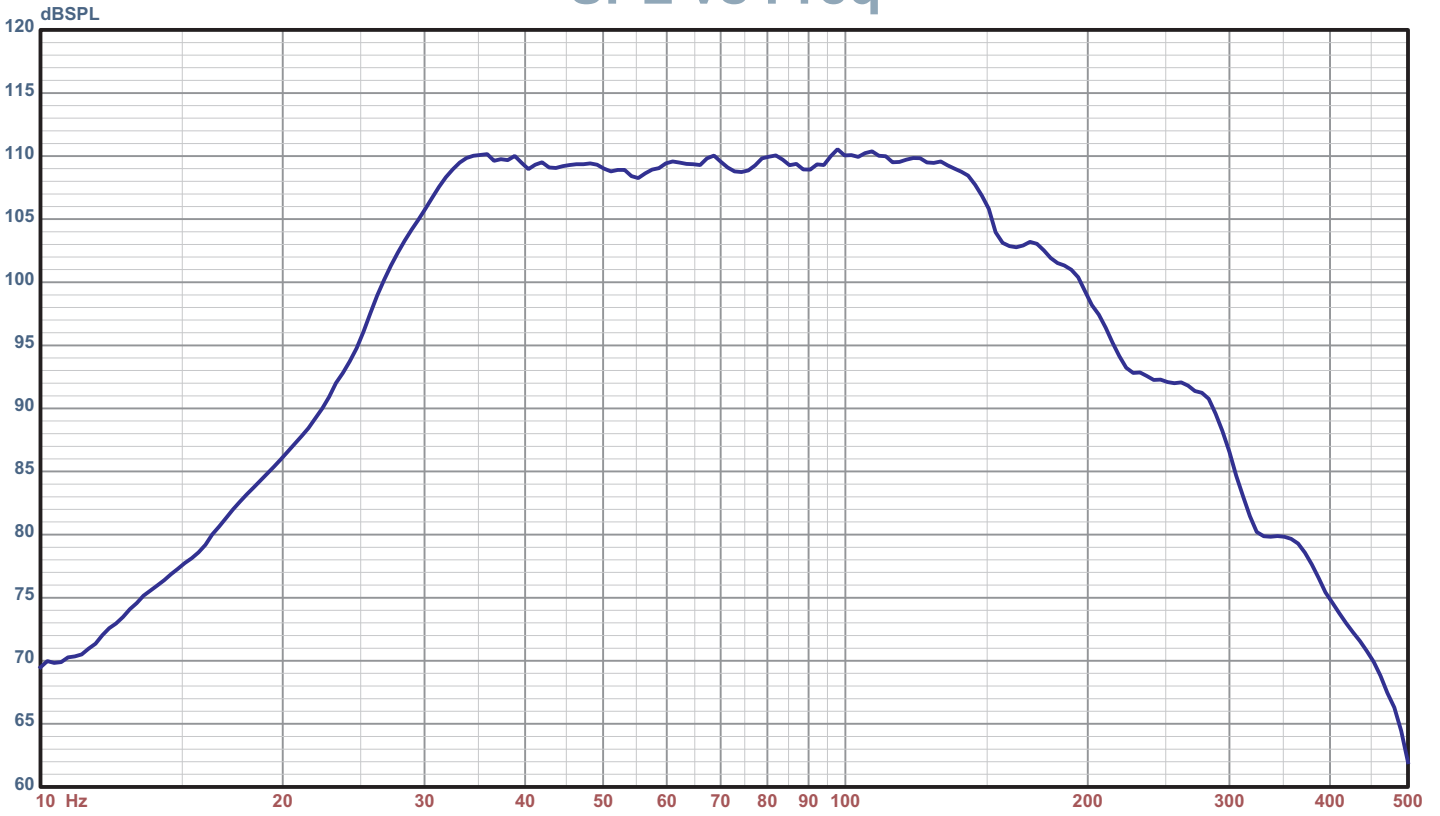

— 1: 2 x Paraflex 360
2 x Paraflex 640 1w/1m half space (groundplane)*



* Measurements taken using supplied Digidrive settings

Time vs Freq



— 1: 2 x Paraflex 360
2 x Paraflex 640 Group Delay*



* Measurements taken using supplied Digidrive settings